



On Top of the World's Best Selling Cakes

The PhotoCake® 1/2 Sheet Printer

Operation

Load all media into the top tray.

1/2 Sheet media – set paper guide to the left. (See yellow arrow diagram below)

1/4 Sheet media – set paper guide to the right. (See red arrow diagram below)

Insert one sheet of media, printable side up (shiny side down), into the top tray opening, resting on the fully extended support. (See diagram below)

Care and Maintenance

Keep the printer bed and rollers located inside the printer cover clean to prevent sheet feed problems. Wipe with a lightly dampened paper towel, monthly or as needed. Clean the surface of the printer with a soft, clean cloth lightly moistened with a mild detergent dissolved in water. It is recommended that you run a color test daily. Use the cleaning cartridge twice a month to ensure top performance.

 
 
Note: Never spray liquids directly onto or into your printer.

CAUTION




BE SURE TO PEEL THE EDIBLE MEDIA OFF THE BACKING MATERIAL BEFORE PLACING THE EDIBLE MEDIA INTO THE PRINTER'S TOP MEDIA TRAY.

Printing on edible media that is still attached to the backing material may cause the following problems: 1) The edible material may tear when an attempt is made to peel it away from the backing material and 2) Printing errors such as misalignment of the image can occur.

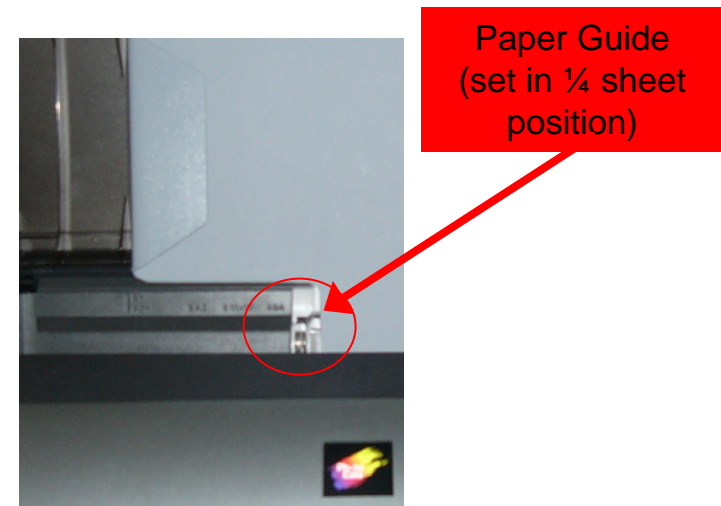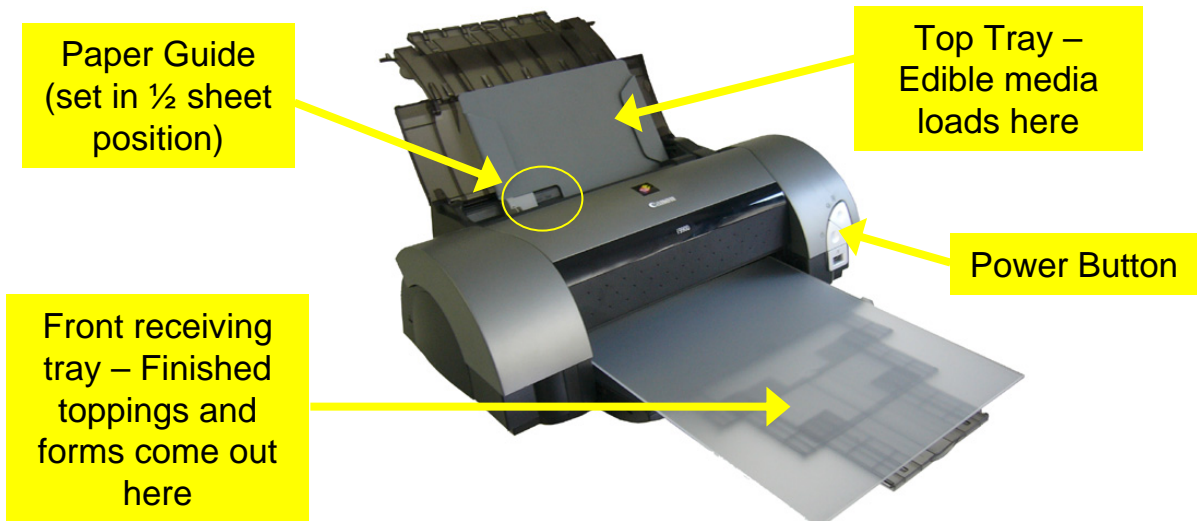

The PhotoCake® 1/2 Sheet Printer

 PhotoCake® III ½ Sheet Set up Diagram

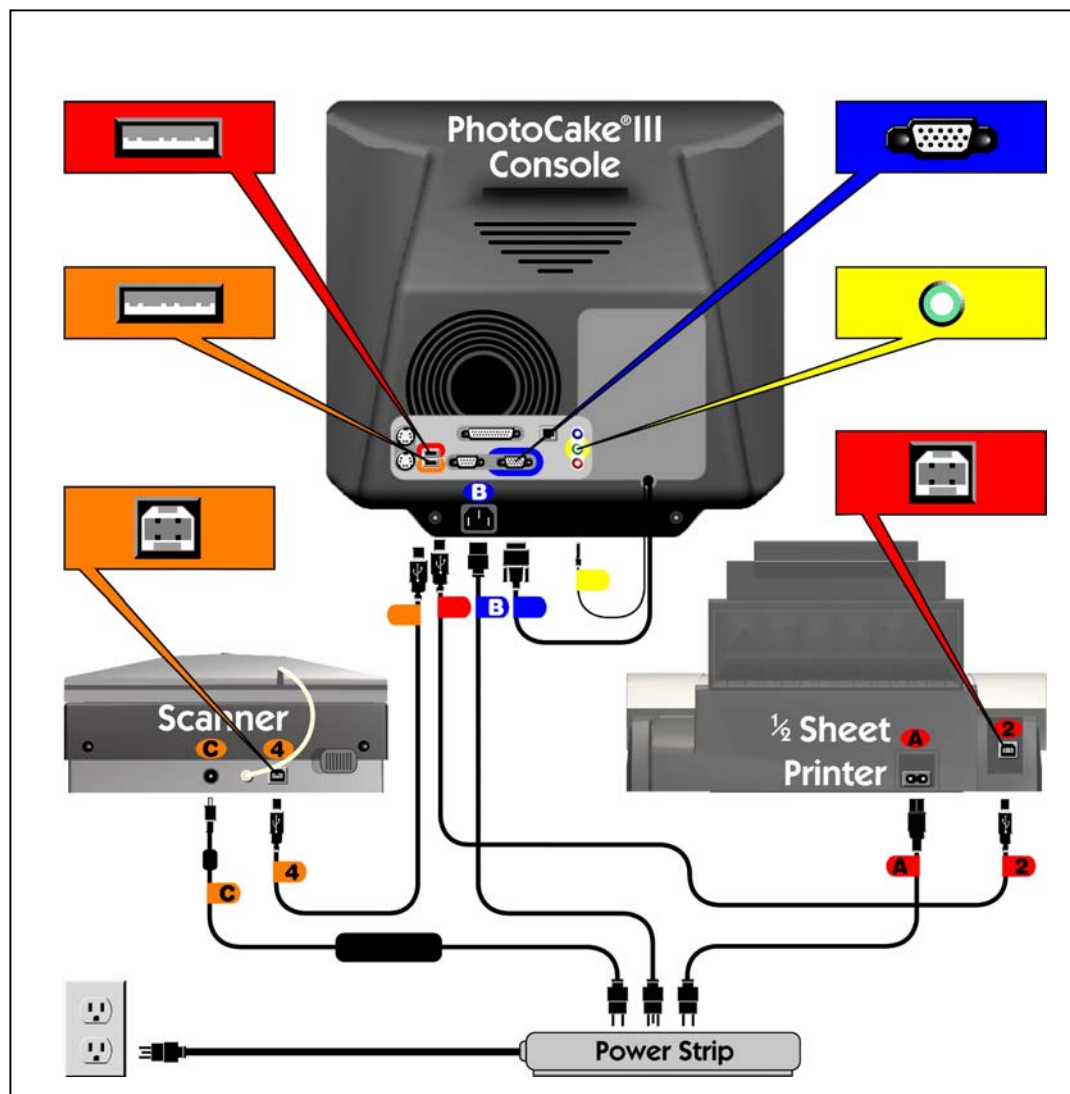

Connections are **color coded** for easy hook up.

Questions?
Call our PhotoCake®
Tech Team @
1-800-644-1228