

Print Head & Ink Cartridge Installation Instructions



Print Head

1. Remove the print head from the package.
2. Remove the protective cap from the print head.
3. Do not touch the print head nozzles or the electrical contacts.
4. Raise the light gray lock lever on the printer and slide the print head into the holder.
5. Lower the lock lever and press it down until it “clicks” into place.

Ink Cartridges

1. Remove the ink cartridges from the package and remove the plastic end-caps. (The caps may be either red or orange plastic.)
2. Hold the cartridge by the spine that divides the two chambers.
3. Remove all of the silver tape covering the cartridge’s vent hole.
4. Turn the cartridge over, keeping your fingers on the dividing spine, and remove the orange cap from the ink flow opening.
5. Place the cartridge in the corresponding color slot of your printer. Press down until the ink cartridges “click” into place.
6. Print a color test.